

# digiCOVER Hybrid Glas 06.11.2019

Marke digiCOVER	Passend für	Artikelnr.	UVP
2,5	4/3 6,4cm	G412	19,90
2,7	16/9 6,8 cm	G403-169	19,90
2,7	4/3 6,8 cm	G403	19,90
2,8	16/9 7,1cm	G413-169	19,90
2,8	4/3 7,1 cm	G413	19,90
3,0	4/3 7,6cm	G414	19,90
3,0	16/9 7,6cm	G414-169	19,90
3,2	4/3 8,1 cm	G320	19,90
3,2	16/9 8,1cm	G320-169	19,90
3,5	16/9 8,9 cm	G405-169	19,90
3,5	4/3 8,9 cm	G405	19,90
Blackmagic	Pocket Cinema	G6019	19,90
Canon	EOS 1000D	G1865	19,90
Canon	EOS 100D	G3502	19,90
Canon	EOS 1200D	G3784	19,90
Canon	EOS 1300D / 2000D	G4193	19,90
Canon	EOS 1D X	G3168	19,90
Canon	EOS 200D	G4540	19,90
Canon	EOS 250d	G6034	19,90
Canon	EOS 4000D	G4794	19,90
Canon	EOS 5D	G436	19,90
Canon	EOS 5D Mark II	G1961	19,90
Canon	EOS 5D Mark III / IV	G3169	19,90
Canon	EOS 5DS/5DS R	G4038	19,90
Canon	EOS 60D / 600D	G2616	19,90
Canon	EOS 650D / 700D	G3268	19,90
Canon	EOS 6D	G3315	19,90
Canon	EOS 6D Mark II	G4541	19,90
Canon	EOS 70D / 77D	G3622	19,90
Canon	EOS 750D / 760 D / 800D	G4037	19,90
Canon	EOS 7D	G2283	19,90
Canon	EOS 7D Mark II	G3905	19,90
Canon	EOS 80D	G4194	19,90
<b>Canon</b>	<b>EOS 90d</b>	<b>G6044</b>	19,90
Canon	EOS M	G3314	19,90
<b>Canon</b>	<b>EOS M 200</b>	<b>G6046</b>	19,90
Canon	EOS M10	G4166	19,90
Canon	EOS M3	G4039	19,90
Canon	EOS M5 / M6 / M50 / M100	G4279	19,90
<b>Canon</b>	<b>EOS M6 Mark II</b>	<b>G6043</b>	19,90
Canon	EOS R	G6000	19,90
Canon	EOS RP	G6012	19,90
Canon	EOS-1D X Mark II	G4191	19,90
Canon	G3X	G4113	19,90
Canon	IXUS 185	G4356	19,90
Canon	IXUS 190	G4357	19,90
Canon	IXUS 275HS	G4147	19,90
Canon	PowerShot G16	G3634	19,90
Canon	PowerShot G1X	G3134	19,90
Canon	PowerShot G1X III / G5 X / G9 X / G9 X II	G4142	19,90
Canon	PowerShot G1X Mark II	G3804	19,90

Canon	PowerShot G7X / G7X Mark II	G3906	19,90
Canon	PowerShot N/N2	G3438	19,90
Canon	PowerShot N100	G3803	19,90
Canon	PowerShot SX 70	G6005	19,90
Canon	PowerShot SX410 is	G4036	19,90
Canon	PowerShot SX60 HS	G3929	19,90
Canon	PowerShot SX600/700HS/710HS	G3796	19,90
Canon	PowerShot SX620HS / SX720HS	G4329	19,90
Canon	PowerShot SX730 HS / 740HS	G4479	19,90
<b>Canon</b>	<b>PowerShot G 5X Mark II</b>	<b>G6045</b>	19,90
<b>Canon</b>	<b>PowerShot G 7X Mark III</b>	<b>G6041</b>	19,90
Fujifilm	X-T1	G3767	19,90
FujiFilm	GFX 100	G6039	29,90
FujiFilm	GFX 50R	G6017	19,90
Fujifilm	GFX 50s	G4389	19,90
Fujifilm	X-100F	G4363	19,90
Fujifilm	X-100T	G3928	19,90
Fujifilm	X-30	G3927	19,90
Fujifilm	X-70	G4180	19,90
Fujifilm	X-A1	G3664	19,90
Fujifilm	X-A10	G4355	19,90
Fujifilm	X-A3 / X-A5	G4278	19,90
<b>Fujifilm</b>	<b>X-A7</b>	<b>G6047</b>	19,90
Fujifilm	X-E2 / X-E2S	G3729	19,90
Fujifilm	X-E3	G4623	19,90
FujiFilm	X-F10	G6016	19,90
Fujifilm	X-M1	G3642	19,90
<b>Fujifilm</b>	<b>X-Pro 3</b>	<b>G6057</b>	19,90
Fujifilm	X-Pro1	G3178	19,90
Fujifilm	X-Pro2	G4179	19,90
Fujifilm	X-Q1	G3727	19,90
Fujifilm	X-T10 / X-T20 / X-T100	G4079	19,90
Fujifilm	X-T2 / X-H1	G4257	19,90
Fujifilm	X-T3	G6001	19,90
FujiFilm	X-T30	G6011	19,90
Fujifilm	XP120 / XP130	G4702	19,90
Hasselblad	X1D-50c	G4398	19,90
<b>Hasselblad</b>	<b>X1DII 50C</b>	<b>G6051</b>	19,90
Leica	C	G3731	19,90
Leica	C-Lux (Typ 1546)	G4027-L	19,90
Leica	CL (Typ 7323)	G4670	19,90
Leica	D-LUX ( Typ109 )	G3959	19,90
Leica	D-LUX 6	G3359	19,90
<b>Leica</b>	<b>D-LUX5</b>	<b>G6058</b>	19,90
Leica	D-LUX7	G6036	19,90
Leica	M	G3418	19,90
Leica	M 10	G4354	19,90
Leica	M 9	G2293	19,90
<b>Leica</b>	<b>M-E (Typ 240)</b>	<b>G6054</b>	19,90
Leica	M8/M9	G1115	19,90
Leica	Q	G4116	19,90
<b>Leica</b>	<b>Q-P</b>	<b>G6055</b>	19,90

Leica	Q2	G6035	19,90
Leica	SL	G4144	19,90
Leica	T / TL / TL2	G3910	19,90
Leica	V-Lux (Typ 114)	G4112	19,90
Leica	V-LUX 4	G3357	19,90
Leica	V-Lux 40	G3358	19,90
Leica	X 1/X2	G2294	19,90
Leica	X Vario	G3616	19,90
Nikon	1 J4	G3926	19,90
Nikon	A1000	G6008	19,90
Nikon	A300	G4286	19,90
Nikon	A900	G4316	19,90
Nikon	B600	G6009	19,90
Nikon	CoolPix A	G3639	19,90
Nikon	Coolpix A100	G6015	19,90
Nikon	COOLPIX B500	G4281	19,90
Nikon	COOLPIX B700	G4280	19,90
Nikon	Coolpix S9400	G3433	19,90
Nikon	COOLPIX S9900	G4024	19,90
Nikon	COOLPIX W300	G4605	19,90
Nikon	D300	G1544	19,90
Nikon	D3200 / D3300 / D3400 / D3500	G3251	19,90
Nikon	D4/D5	G3137	19,90
Nikon	D4s	G3797	19,90
Nikon	D5100	G2880	19,90
Nikon	D5200	G3386	19,90
Nikon	D5300	G3725	19,90
Nikon	D5500 / D5600	G4023	19,90
Nikon	D610	G3665	19,90
Nikon	D700	G1854	19,90
Nikon	D7000	G2631	19,90
Nikon	D7100 / D600	G3311	19,90
Nikon	D7200	G4025	19,90
Nikon	D750 / D500	G3904	19,90
Nikon	D7500	G4516	19,90
Nikon	D800 / D810	G3183	19,90
Nikon	D850	G4600	19,90
Nikon	DL18-50	G4195	19,90
Nikon	DL24-500	G4196	19,90
Nikon	DL24-85	G4197	19,90
Nikon	KeyMission 170	G4285	19,90
Nikon	KeyMission 80	G4283	19,90
Nikon	P1000	G6004	19,90
Nikon	P900	G4026	19,90
Nikon	Z 6 / Z 7	G6002	19,90
<b>Nikon</b>	<b>Z50</b>	<b>G6060</b>	19,90
Olympus	E-330	G930	19,90
Olympus	E-420	G1793	19,90
<b>Olympus</b>	<b>OM-D E-M1 Mark II / M1X</b>	<b>G4340</b>	19,90
Olympus	OM-D E-M10 / E-M10 II/ E-M10 III	G3644	19,90
<b>Olympus</b>	<b>OM-D E-M5 / MarkII / Mark III</b>	<b>G3187</b>	19,90
Olympus	PEN E-PL5	G3304	19,90

Olympus	Pen E-PL7 / E-PL8 / E-PL9	G3918	19,90
Olympus	Pen-F	G4171	19,90
Olympus	Stylus 1	G3750	19,90
Olympus	Stylus SH1 / SH2	G3898	19,90
Olympus	TG-3 / TG-4 / TG-5	G4336	19,90
Olympus	TG-850 / TG-860	G4049	19,90
Olympus	XZ-2	G3303	19,90
Panasonic	DC - S 1 / S 1R / S1 H	G6007	19,90
Panasonic	DC-FZ 1000 II	G6013	19,90
Panasonic	DC-G 91	G6038	19,90
<b>Panasonic</b>	<b>DC-GX880</b>	<b>G6040</b>	19,90
Panasonic	DC-TZ 96	G6014	19,90
Panasonic	DC-TZ91	G4509	19,90
Panasonic	DMC-CM 1	G3907	19,90
Panasonic	DMC-FT30	G4028	19,90
Panasonic	DMC-FT5	G4478	19,90
Panasonic	DMC-FT5	G4815	19,90
Panasonic	DMC-FZ100	G2579	19,90
Panasonic	DMC-FZ1000	G3897	19,90
Panasonic	DMC-FZ200	G3293	19,90
Panasonic	DMC-FZ2000	G4284	19,90
Panasonic	DMC-FZ300 / FZ330	G4106	19,90
Panasonic	DMC-FZ72	G3643	19,90
Panasonic	DMC-FZ82 / FZ83	G4399	19,90
Panasonic	DMC-G1 K	G1946	19,90
Panasonic	DMC-G6	G3525	19,90
Panasonic	DMC-G70	G4078	19,90
Panasonic	DMC-G81	G4307	19,90
Panasonic	DMC-G9	G4685	19,90
Panasonic	DMC-GF7	G4029	19,90
Panasonic	DMC-GH4 / GH5 / GH5s	G3896	19,90
Panasonic	DMC-GM5	G3925	19,90
Panasonic	DMC-GX 7	G3638	19,90
Panasonic	DMC-GX 8	G4117	19,90
Panasonic	DMC-GX80 / GX9	G4218	19,90
Panasonic	DMC-GX800	G4362	19,90
Panasonic	DMC-LF1	G3546	19,90
Panasonic	DMC-LX 100 / LX100 II	G3908	19,90
Panasonic	DMC-LX15	G4282	19,90
Panasonic	DMC-SZ10	G4557	19,90
Panasonic	DMC-TZ58	G4350	19,90
Panasonic	DMC-TZ71 / TZ81 / TZ101 / TZ202	G4027	19,90
Panasonic	GM1	G3683	19,90
Panasonic	TZ 41	G3419	19,90
Panasonic	TZ 55/56	G3777	19,90
Panasonic	TZ 60/61	G3776	19,90
Pentax	K-1 / K-1 Mark II	G4192	19,90
Pentax	645Z	G4033	19,90
Pentax	K-30/K-50	G3285	19,90
Pentax	K-70	G4256	19,90
Pentax	K-S1	G4034	19,90
Pentax	K-S2	G4035	19,90

Pentax	KP	G4390	19,90
Pentax	Pentax K3	G3667	19,90
<b>Ricoh</b>	<b>G900 /900SE</b>	<b>G6048</b>	19,90
Ricoh	GR II	G4255	19,90
Ricoh	GR III	G6018	19,90
<b>Ricoh</b>	<b>WG-6</b>	<b>G6049</b>	19,90
<b>Sigma</b>	<b>FP</b>	<b>G6061</b>	19,90
Sony	Alpha 5000 / 5100	G3789	19,90
Sony	Alpha 58	G3274	19,90
Sony	Alpha 6000 /6100/ 6300 / 6400/ 6500 / 6600	G3790	19,90
Sony	Alpha 68	G4172	19,90
Sony	Alpha 7 / 7R / 7S	G3724	19,90
Sony	Alpha 7 II / 7III / 7IV 7R II / 7R III / 7RIV	G3993	19,90
Sony	Alpha 77V / Alpha 77 II	G3002	19,90
<b>Sony</b>	<b>Alpha 9 / 9II</b>	<b>G6059</b>	19,90
Sony	Alpha 99/99 II	G3331	19,90
<b>SONY</b>	<b>Cyper Shot DSC-RXO II</b>	<b>G6050</b>	19,90
Sony	DSC-H400	G3787	19,90
Sony	DSC-HX350	G4388	19,90
Sony	DSC-HX400V	G3786	19,90
Sony	DSC-HX50 / HX50V	G3524	19,90
Sony	DSC-HX60/60V	G3788	19,90
Sony	DSC-HX90V / HX80	G4077	19,90
Sony	DSC-RX10 / RX10II / RX10 III/IV	G3723	19,90
Sony	DSC-RX100	G3276	19,90
Sony	DSC-RX100 II-VII / HX95 / HX99	G3619	19,90
Sony	DSC-RX1RII	G4143	19,90
Sony	DSC-WX200 / 220	G3544	19,90
Sony	DSC-WX350	G3785	19,90
Sony	DSC-WX500	G4141	19,90
Sony	DSC-W830	G6020	19,90